INSTRUCTION AND PARTS LIST FP-4P 2/26/2018

Jaaschg®

FP-4P (Pressure Fed) Flow Pencil **WARNING:** Follow all safety precautions. **CAUTION:** Never point flow pencil at face when pressurized.





Comes with LN-1/32 (Assembled) and LN-1/64, 3/64, and 1/16 Nibs loose Total Length of Flow Pencil is 5 -1/2 inches.

INTRODUCTION:

The **FP-4P Flow Pencil** is used extensively by Cake Artists, Bakers, and Home Bakers to decorate their Cakes, Cupcakes, Cookies, etc. The Flow Pencil is easy to control and operate.

MIXING:

- 1. Proper mixing of Royal Icing & Butter Cream is essential for continuous and uninterrupted flow.
- 2. Experiment with thinning of Icing for best flow.
- Do not mix lcing in cup of Flow Pencil, use a separate container and pour into cup only when lcing is at proper consistency.

LOADING ICING: (Tighten adjusting screw at rear of flow pencil before loading lcing)

- 1. Remove **FP-5 Cover**, and pour premixed Icing into cup 3/4 full, Hold lid firmly and push plunger into cup, Pressure will build and plunger will rise, thread lid onto cup.
- Turning the MU-72 Adjusting Screw will control the movement of the MU-65 Finger Lever Assembly which controls the flow of lcing.

OPERATION:

- Hold the FP-4P Flow Pencil in your hand as you would a pencil or brush and place your finger lightly over the MU-65 Finger Lever. When ready to begin piping, pull back on the MU-65 Finger Lever, when the icing begins to flow raise the pencil up and pull in a backward motion off the surface slightly.
- 2. Regulate the flow to the desired feed rate by turning **MU-72 Adjusting Screw**.
- 3. When the plunger gets closer to the cap the flow rate will slow down.
- 4. Practice on a Cake board before working on a actual cake.

5. Correct adjustment of controls and skill of operation will result in uninterrupted and continuous piping.

CARE AND CLEANING:

- 1. Before storing **FP-4P** Flow Pencil clean it thoroughly. Rinse cup and lid in hot water to clean out lcing,remove nib and clean in hot water, wipe dry.
- MU-49L Needle is held in position by MU-57 Needle Chuck and VL-141 Locknut. Remove the needle by unscrewing the MU-71 Handle and removing the spring. Loosen the VL-141 Locknut and then remove the needle for cleaning.


ADJUSTING OR REPLACING WORN PACKING WASHER:

- 1. If PTFE Packing-#6 becomes worn or loose it must be tightened or replaced.
- 2. You will need a small screwdriver to remove or tighten the Packing Nut.
- When replacing your PTFE Packing press Packing onto the Packing Nut-#6. Use a small screwdriver to tighten packing nut into shell until it is tight then back out one-half turn, may vary.
- 4. Now insert needle you should feel a slight resistance. If too loose or too tight adjust the Packing Nut with screwdriver until you feel some slight resistance.
- 5. Now completely re-assemble guts of Flow Pencil.

CAUTION: OVER TIGHTENING CUP WILL CAUSE TRIGGER TO MALFUNCTION.

Paasche Airbrush Company

4311 North Normandy Avenue Chicago, IL 60634-1395 Phone: 773-867-9191 • Fax: 773-867-9198 Website: paascheairbrush.com E-Mail: info@paascheairbrush.com

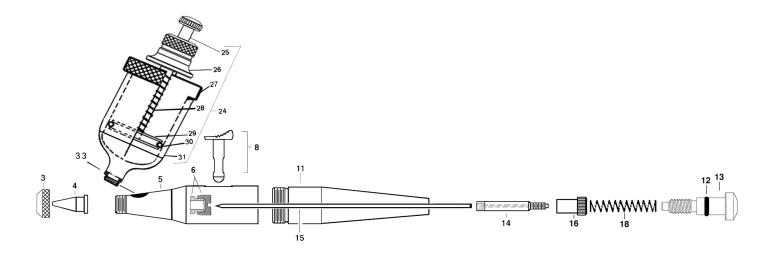

FP-4P FLOW PENCIL (WITH EXTRA NIBS: LN-1/64, 3/64 AND 1/16) Nibs are grooved as follows: LN-1/64 has one (1) groove LN-1/32 has two (2) grooves LN-3/64 has three (3) grooves LN-1/16 has four (4) grooves

<u>No.</u>	Part No.	Description	No.	Par	rt No.	Description
3	MU-9	Tip Nut	16	٧L·	-141	Locknut
4	LN-1/32	Nib (1/64, 3/64 & 1/16 Sizes)	18	٧L·	-140	Spring
5	MU-48A	Shell Assembly	32	MU	-77	Stand
6	MU-612	PTFE Packing & Packing Nut	24	*FP-	45 P	ressure Cup Assembly
8	MU-65	Finger Lever Assembly				(new male thread)
11	MU-71	Handle	2	25	*MU-2	5 Rod & Cap Assembly
12	3A-4	"O" Ring	2	26 *	MU-69	Nut
13	MU-72	Adjusting Screw	2	27	*FP-5	Cover (only)
14	MU-57	Needle Chuck	2	28	*MU-20	3 Spring
15	MU-49L	Needle	2	29	*FP-9	Piston
			3	30	*FP-8	"O" Ring
Contains Aluminum			3	31	*FP-6	Cup (only) Aluminum
Contains Brass,Nickel Plated Contains Stainless Steel Contains FDA Approved Silicone				33	*AE-43	"O" Ring